

PRODUCT DATA & INSTALLATION

Bulletin T60-TFM-PDI-1 Part # 1090825



PRODUCT SUPPORT web: t-rp.com/tfm email: acc-fc@t-rp.com call: 1-844-893-3222 x526




TFM Fluid Coolers



One to Four Fan Motors

Electrical Power: 208-230/1/60, 208-230/3/60, 460/1/60, 460/3/60, 575/1/60, 575/3/60

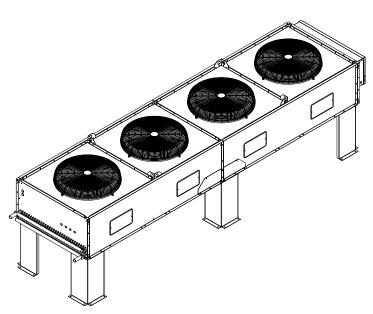


CONTENTS

	Page
Nomenclature	2
Features & Options	2
Fluid Cooler Selection	3
Typical Applications	4
Physical/Mechanical Data (All Models)	5
Standard Motors	
Electrical Data	5
Low Ambient Operation	6
Wiring Diagrams	7 - 8
EC Motors	
About EC Motors	9
Electrical Data	9
Wiring Diagram	10
EC Motor Application Data	11 - 12

	Page
Header Sizes (All Models)	13
Dimensional Data (All Models)	14 - 15
Installation	16 - 18
Hydronic System Components	18 - 19
Pump Package System Parameters	20
Fluid Cooler Selection Sheet	21
Project Information	22
Product Support Resources	23
"As Built" Service Parts List	BACK

NOMENCLATURE

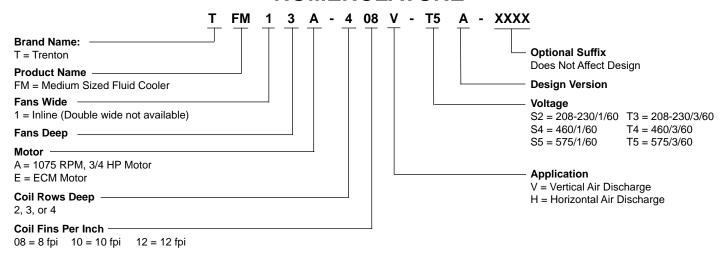

STANDARD FEATURES INCLUDE

- Heavy-gauge galvanized steel cabinet construction
- Energy efficient PSC and 3 phase fan motors with internal overload protection
- Quiet "swept wing" fan blade for quiet operation and optimal efficiency
- Heavy duty 24" legs

- All fan sections individually baffled with clean-out panels.
- Zinc plated huck bolts
- Control circuit voltage 230 V

OPTIONAL FEATURES

- Fan Cycling Ambient thermostat / fan row with contactors
- Fan Cycling Aquastat thermostat fan cycling control / outlet fluid temperature
- · Individual fan motor fusing
- Non-fused disconnect
- Horizontal air discharge configuration

- Variable Speed EC Motor which provides optimum efficiency and sound levels (see pg. 9-12 for details)
- Extended leg kits (36" or 48") with cross bracing for extra rigidity
- Optional fin materials
- Optional coil coating
- Voltages available for 60Hz or 50Hz

TFM

FLUID COOLER SELECTION



Previously, the selection of a fluid cooler involved using charts, correction factors and hand calculations to determine the capacity and make the selection.

We have simplified the selection process. Our engineering department has created a computer program. This provides flexibility and streamlines the selection process

TEMPERATURE LIMITATIONS

Fluid Coolers are suitable for leaving air temperatures up to a maximum of $130^{\circ}F$ ($54^{\circ}C$). Fluid temperature up to an average of $150^{\circ}F$ ($66^{\circ}C$) may be used at ambient temperatures up to $90^{\circ}F$ ($32^{\circ}C$). Entering fluid conditions should not exceed $200^{\circ}F$ ($93^{\circ}C$).

Fluid Type:	□ Water	•	lene Glycol / Water ylene Glycol / Water	
Elevation:	Feet Above	e Sea Level		
Fluid Concentration	on:	%Water	%Glycol	
Air Inlet (ambient t	emp.)	ºF		
Three of the four fol	• •	•		
			2. Fluid Inlet Temperature	0
3. Fluid Flow Rate		GPM	4. Fluid Outlet Temperature	°F
J. I IUIM I IOW INALE			4. I laid Oddiot Tomporataro	
			4. Flaid Gallot Tomporature	
Other Items To Spec	cify:			
Other Items To Specification 1. Voltage (S2 = 20	cify: 8-230/1/60 S4 = 4 0	60/1/60 S5 =	: 575/1/60	— Г4 or T
Other Items To Special	cify: 8-230/1/60 S4 = 46 8-230/3/60 T4 = 46	60/1/60 S5 = 60/3/60 T5 =	= 575/1/60 575/3/60) Specify S2,S4, S5,T3,	Γ4 or T
Other Items To Specification 1. Voltage (S2 = 20 T3 = 20 C2. Please Specify (cify: 8-230/1/60 S4 = 46 8-230/3/60 T4 = 46	60/1/60 S5 = 60/3/60 T5 = ons Required:	= 575/1/60 575/3/60) Specify S2,S4, S5,T3,	Γ4 or T
Other Items To Specification 1. Voltage (S2 = 20 T3 = 20 C2. Please Specify (cify: 8-230/1/60 S4 = 40 8-230/3/60 T4 = 40 Check Box) Optio age 240V (Standar	60/1/60 S5 = 60/3/60 T5 = ons Required:	: 575/1/60 575/3/60) Specify S2,S4, S5,T3,	Γ4 or T
Other Items To Specific Control Volt	cify: 8-230/1/60 S4 = 46 8-230/3/60 T4 = 46 Check Box) Optio age 240V (Standar age 120V	60/1/60 S5 = 60/3/60 T5 = ons Required: rd)	: 575/1/60 575/3/60) Specify S2,S4, S5,T3,⁻: □ Variable Speed EC Motor	Γ4 or T
Other Items To Specific Control Volt	cify: 8-230/1/60 S4 = 46 8-230/3/60 T4 = 46 Check Box) Optio age 240V (Standar age 120V	60/1/60 S5 = 60/3/60 T5 = ons Required: rd)	: 575/1/60 575/3/60) Specify S2,S4, S5,T3, : □ Variable Speed EC Motor □ Extended leg kits 36"	Γ4 or T
Other Items To Specific Control Volt	cify: 8-230/1/60 S4 = 46 8-230/3/60 T4 = 46 Check Box) Optio age 240V (Standar age 120V	60/1/60 S5 = 60/3/60 T5 = ons Required: rd)	: 575/1/60 575/3/60)Specify S2,S4, S5,T3, : □ Variable Speed EC Motor □ Extended leg kits 36" □ Extended leg kits 48"	Γ4 or T
Other Items To Specific Control Volt	cify: 8-230/1/60 S4 = 46 8-230/3/60 T4 = 46 Check Box) Optio age 240V (Standar age 120V	60/1/60 S5 = 60/3/60 T5 = ons Required: rd)	: 575/1/60 575/3/60)Specify S2,S4, S5,T3, : □ Variable Speed EC Motor □ Extended leg kits 36" □ Extended leg kits 48" □ Gold Coat Fin □ Copper Fin □ Heresite Coating	Γ4 or T
Other Items To Specific Specific Specific Control Volt Control Volt Control Volt Control Volt Fan Cycling Fan Cycling Non-fused of	cify: 8-230/1/60 S4 = 46 8-230/3/60 T4 = 46 Check Box) Option age 240V (Standard age 120V age 24V Ambient Thermoso Aquastat Thermoso Control by Others disconnect	60/1/60 S5 = 60/3/60 T5 = 60/3/	: 575/1/60 575/3/60)Specify S2,S4, S5,T3, : □ Variable Speed EC Motor □ Extended leg kits 36" □ Extended leg kits 48" □ Gold Coat Fin □ Copper Fin	Γ4 or T
Other Items To Specific Specific Specific Control Volt Control Volt Control Volt Control Volt Fan Cycling Fan Cycling Non-fused of	cify: 8-230/1/60 S4 = 46 8-230/3/60 T4 = 46 Check Box) Optio age 240V (Standar age 120V	60/1/60 S5 = 60/3/60 T5 = 60/3/	: 575/1/60 575/3/60)Specify S2,S4, S5,T3, : □ Variable Speed EC Motor □ Extended leg kits 36" □ Extended leg kits 48" □ Gold Coat Fin □ Copper Fin □ Heresite Coating	Γ4 or T
Other Items To Specific Specific Specific Control Volt Control Volt Control Volt Control Volt Fan Cycling Fan Cycling Non-fused of	cify: 8-230/1/60 S4 = 46 8-230/3/60 T4 = 46 Check Box) Option age 240V (Standard age 120V age 24V Ambient Thermoso Aquastat Thermoso Control by Others disconnect	60/1/60 S5 = 60/3/60 T5 = 60/3/	: 575/1/60 575/3/60)Specify S2,S4, S5,T3, : □ Variable Speed EC Motor □ Extended leg kits 36" □ Extended leg kits 48" □ Gold Coat Fin □ Copper Fin □ Heresite Coating	Γ4 or T
Other Items To Specific 1. Voltage (\$2 = 20) T3 = 20: 2. Please Specify (Control Volt Control Volt Fan Cycling Fan Cycling Fan Cycling Non-fused of Horizontal a	cify: 8-230/1/60 S4 = 46 8-230/3/60 T4 = 46 Check Box) Option age 240V (Standard age 120V age 24V Ambient Thermoso Aquastat Thermoso Control by Others disconnect	60/1/60 S5 = 60/3/60 T5 = 60/3/	: 575/1/60 575/3/60)Specify S2,S4, S5,T3, : □ Variable Speed EC Motor □ Extended leg kits 36" □ Extended leg kits 48" □ Gold Coat Fin □ Copper Fin □ Heresite Coating	Γ4 or T
Other Items To Specification 1. Voltage (\$2 = 20) T3 = 20 2. Please Specify (Control Voltory Control Voltory Control Voltory Fan Cyclingy Fan Cyclingy Non-fused of Horizontal at Customer Info:	cify: 8-230/1/60 S4 = 40 8-230/3/60 T4 = 40 Check Box) Option age 240V (Standard age 120V age 24V Ambient Thermoso Aquastat Thermoso Control by Others disconnect air discharge configuration	60/1/60 S5 = 60/3/60 T5 = ons Required: rd) stat stat stat uration	: 575/1/60 575/3/60)Specify S2,S4, S5,T3, : □ Variable Speed EC Motor □ Extended leg kits 36" □ Extended leg kits 48" □ Gold Coat Fin □ Copper Fin □ Heresite Coating	Γ4 or T

TYPICAL APPLICATIONS


60Hz

Data Center / Computer Rooms

Fluid Coolers are suitable for use with Computer Room Air Conditioning (CRAC) Units. (see Illustration below)

Dry Type Fluid Coolers are particularly suitable for applications where long pipe runs of refrigerant piping to an air cooled condenser are not practical. Cooling Tower maintenance and winter operation issues are eliminated. Piping can be easily installed and low ambient control can be used using water regulating valves. Fluid cooler can be easily connected to city water for emergency use.


The glycol loop is sometimes connected to a "Free-Cooling" Economizer Coil within the CRAC unit, which allows for partial free-cooling when the glycol loop temperature is below the CRAC units return air temperature.

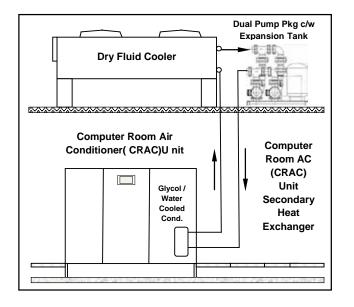

Industrial Glycol /Water Cooling Systems


Water pollution issues and water conservation have become critical in recent years. The "Once-Only" use of water for industrial process cooling has been wasteful and often unnecessary. By using a dry type Fluid Cooler, glycol/water for industrial process cooling applications can be cooled to within 10°F (6°C) of the ambient dry bulb temperature. The water is continuously re-circulated and remains in a closed system so reducing the problem of corrosion normally encountered in non re-circulated systems.

Considerable savings can be affected by using a Dry Type Fluid Cooler. Many industrial applications have seen water consumption being reduced by millions of gallons and reduced maintenance costs to a fraction of that experienced prior to the use of a closed non re-circulated system. (see illustration below)

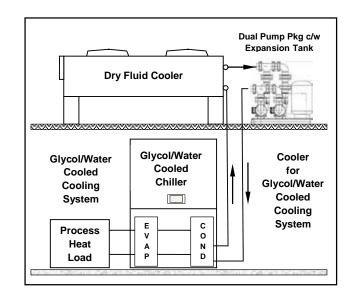

Remote Radiators for Diesel and Gas Engines

A remote radiator is usually required with the larger style of diesel engine. The Fluid Cooler is suitable for this type of application. Designed to give the customer trouble free operation, the multiple fan arrangement reduces the possibility of down time. Units are completely pre-assembled and require only piping and electrical connections. (see illustration to the right)

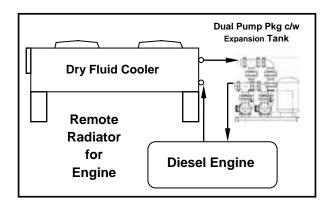



PHYSICAL / MECHANICAL DATA



		ri.		1075 RPI	M (A)		ECM	(E)	INITE	RNAL	APPRO	X. DRY
MODEL NO.	FPI	FAN	AIR F RAT	-	SOUND LEVEL (2)		FLOW TE ⁽¹⁾	SOUND LEVEL (2)		JME (3)	SHIPI WEI	-
		0	CFM	(m³/h)	dBA	CFM	(m³/h)	dBA	US (l	LITRES)	LBS.	(kg.)
TFM 11*-310	10	1 x 1	6870	11670	51	6180	10500	50	1.9	7.2	245	111
TFM 11*-312	12	1 x 1	6640	11280	51	5980	10160	50	1.9	7.2	250	114
TFM 11*-410	10	1 x 1	6620	11250	51	5960	10130	50	2.5	9.5	265	120
TFM 11*-412	12	1 x 1	6400	10870	51	5760	9790	50	2.5	9.5	270	123
TFM 12*-208	8	1 x 2	14800	25150	53	13320	22630	52	2.4	9.1	410	186
TFM 12*-210	10	1 x 2	14400	24470	53	12960	22020	52	2.4	9.1	415	189
TFM 12*-212	12	1 x 2	13900	23620	53	12510	21250	52	2.4	9.1	420	191
TFM 12*-308	8	1 x 2	14200	24130	53	12780	21710	52	3.6	13.6	450	205
TFM 12*-310	10	1 x 2	13700	23280	53	12330	20950	52	3.6	13.6	455	207
TFM 12*-312	12	1 x 2	13300	22600	53	11970	20340	52	3.6	13.6	460	209
TFM 12*-408	8	1 x 2	13700	23280	53	12330	20950	52	4.8	18.2	480	218
TFM 12*-410	10	1 x 2	13200	22430	53	11880	20180	52	4.8	18.2	490	223
TFM 12*-412	12	1 x 2	12800	21750	53	11520	19570	52	4.8	18.2	500	227
TFM 13*-308	8	1 x 3	21300	36190	54	19170	32570	53	5.4	20.4	630	286
TFM 13*-310	10	1 x 3	20600	35000	54	18540	31500	53	5.4	20.4	640	291
TFM 13*-312	12	1 x 3	19900	33810	54	17910	30430	53	5.4	20.4	650	295
TFM 13*-408	8	1 x 3	20500	34830	54	18450	31350	53	7.2	27.3	680	309
TFM 13*-410	10	1 x 3	19900	33810	54	17910	30430	53	7.2	27.3	695	316
TFM 13*-412	12	1 x 3	19200	32620	54	17280	29360	53	7.2	27.3	710	323
TFM 14*-308	8	1 x 4	28400	48250	55	25560	43430	54	7.1	26.9	810	368
TFM 14*-310	10	1 x 4	27500	46720	55	24750	42050	54	7.1	26.9	825	375
TFM 14*-312	12	1 x 4	26600	45190	55	23940	40670	54	7.1	26.9	840	382
TFM 14*-408	8	1 x 4	27400	46550	55	24660	41900	54	9.5	36.0	880	400
TFM 14*-410	10	1 x 4	26500	45020	55	23850	40520	54	9.5	36.0	900	409
TFM 14*-412	12	1 x 4	25600	43490	55	23040	39140	54	9.5	36.0	920	418

NOTES:

- * Insert voltage code (see Nomenclature, page 2)
- (1) For 50 HZ fan data, use 60 Hz CFM (m^3/h) x 0.83
- (2) Sound level pressure at 30 ft (10m)
- (3) Not including headers.

ELECTRICAL DATA

1075 RPM MODELS - SINGLE PHASE

NO. OF		208-23	0/1/60			460/ ⁻	1/60			575	/1/60	
FAN MOTORS	TOTAL FLA	MCA	МОР	WATTS	TOTAL FLA	MCA	МОР	WATTS	TOTAL FLA	MCA	МОР	WATTS
1	3.6	4.5	15.0	790	1.7	2.1	15	810	1.4	1.8	15.0	830
2	7.2	8.1	15.0	1580	3.4	3.8	15	1620	2.8	3.2	15.0	1660
3	10.8	15.1	20.0	2370	5.1	5.5	15	2430	4.2	4.6	15.0	2490
4	14.4	15.3	20.0	3160	6.8	7.2	15	3240	5.6	6.0	15.0	3320

1075 RPM MODELS - THREE PHASE

NO. OF		208-23	0/3/60			460/	3/60			575	/3/60	
FAN MOTORS	TOTAL FLA	MCA	МОР	WATTS	TOTAL FLA	MCA	МОР	WATTS	TOTAL FLA	MCA	МОР	WATTS
1	2.3	2.9	15.0	720	1.2	1.4	15	720	0.9	1.1	15.0	720
2	4.6	5.2	15.0	1440	2.3	2.6	15	1440	1.8	2.0	15.0	1440
3	6.9	7.5	15.0	2160	3.5	3.7	15	2160	2.7	2.9	15.0	2160
4	9.2	9.8	15.0	2880	4.6	4.9	15	2880	3.6	3.8	15.0	2880

LOW AMBIENT OPERATION

60Hz

Fan Cycling Control

When a remote air cooled Fluid Cooler is installed outdoors, it will be subjected to varying temperatures. Within many areas, winter to summer annual temperature swings can be as high as 120°F (48.9°C) or so. This will have a major impact on the performance of the Fluid Cooler. As the ambient temperature drops, the Fluid Cooler capacity increases due to a wider temperature difference between ambient air and entering fluid temperature. As this happens, the leaving fluid temperature drops as well. Cycling of the Fluid Cooler fans helps control the leaving fluid temperature. With this approach to solving low ambient problems, fans are taken off-line one at a time. It is not recommended that multiple fan Fluid Coolers cycle more than two (2) fans per step. The reason for this is that the fluid temperature will change drastically as several fans are taken off-line at the same time. This could result in excessive tube stress within the unit, due to rapid expansion and contraction of the coil which could lead to needless tube failure.

Fans closest to the inlet header should be set to run whenever the fluid circulating pump is running.

Substantial fan motor power savings can be realized as well using this method.

For low ambient conditions, optional Aquastats (Fluid Temperature Controllers) are used to cycle fans on and off as required to maintain constant leaving glycol/water temperature as per the schedules below.




Fan Cycling Control Schedule

FAN ARRANGEMENT SINGLE	FANS CYCLED	FANS IN CONSTANT OPERATION	FANS AVAILABLE FOR VARIABLE SPEED CONTROL
ROW			
1 FAN HEADER END FAN CONTROL PANEL END		•	•
2 FAN	→ 1 STAGE	•	•
3 FAN FAN FAN 2 FAN 3	→ 2'ND STAGE — → 1'ST STAGE —	•	•
4 FAN FAN FAN FAN FAN FAN FAN FAN	● 3'RD STAGE ─ • 2'ND STAGE ─ • 1'ST STAGE ─		


WIRING DIAGRAM AMBIENT FAN CYCLING

1075 RPM 60Hz

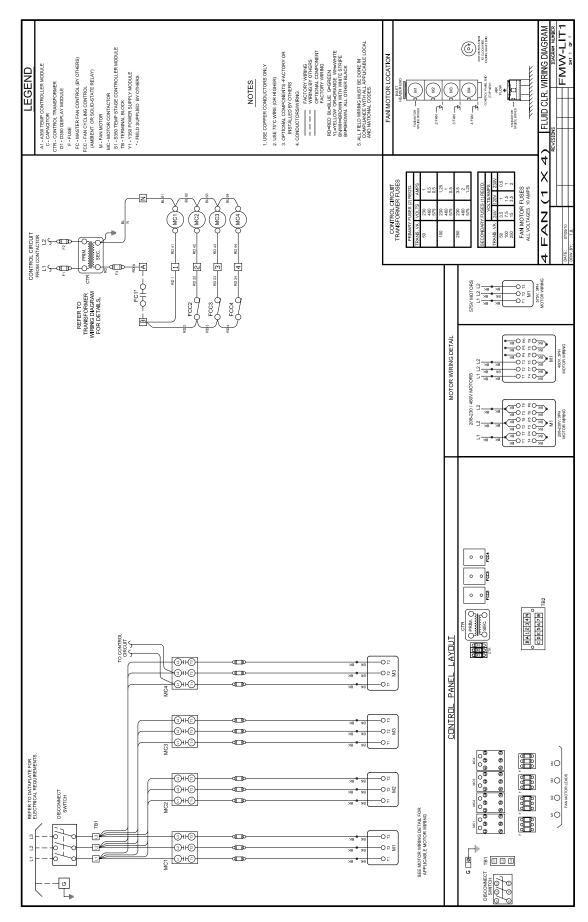

WIRING DIAGRAM AQUASTAT FAN CYCLING

1075 RPM 60Hz

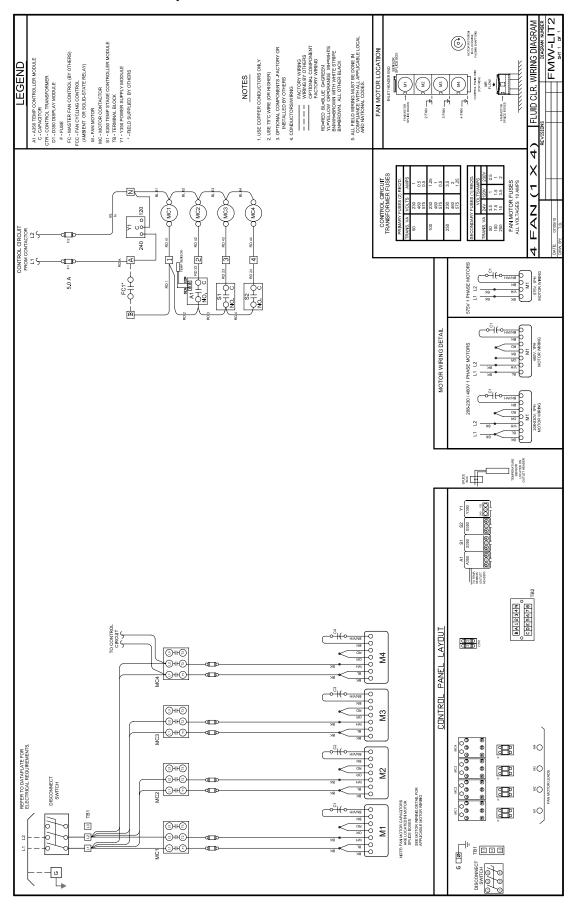



ABOUT EC MOTORS



Fluid coolers utilizing electrically commutated motor (EC motor) technology offer many benefits; Improved Efficiency, Reduced Sound Levels, Speed Control, Simplicity and Reliability

Efficiency

The speed control function of an EC motor allows the condenser to run at optimized energy levels at different operating conditions. Up to 75% in energy savings can be realized when comparing the EC motor speed control method to a conventional fan cycling method.

Sound

As EC motor speeds vary for different operating conditions they also offer reduced sound levels when compared to conventional motor running full speed. Sound levels are reduced on cooler days and in evenings.

Simplicity and Reliability

The installation and control of EC motors is very simple compared to other methods of speed control used on conventional AC motors. Lower running operating temperatures and smooth transitional speed changes make EC motors durable and reliable.

ELECTRICAL DATA


ECM 1075 RPM MODELS - SINGLE PHASE

NO. OF		208-23	0/1/60	
FAN MOTORS	TOTAL FLA	MCA	МОР	WATTS
1	6.3	7.9	15	560
2	12.6	14.2	15	1120
3	18.9	20.5	25	1680
4	25.2	26.8	30	2240



WIRING DIAGRAM MODELS WITH EC MOTORS



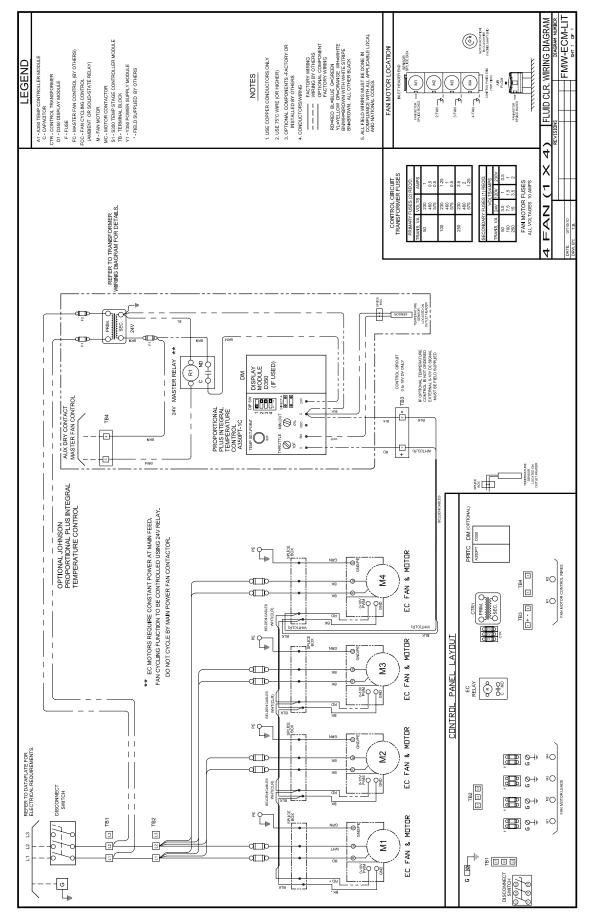

TFM

EC MOTOR APPLICATION



Motors With Built-in Variable Speed -

Optional "E" Fan/motor Code

Units with an E (in nomenclature) motor designation use an EC (electronically commutated) motor / fan combination to provide variable speed fan motor control. ECM fan/motor combinations use DC motors with integral AC to DC conversion allowing direct connection to AC mains with the energy saving and control benefits of a DC motor. Ideally the motors on the fluid cooler should all be EC and simultaneously slow down /speed up together. This provides for maximum energy savings. However some applications may exist where just the last fan or pair of fans (ones closest to header) is solely EC motors. (The remaining conventional type motors are then cycled off by fan cycling temperature controls).




Important Warnings:

(Please read before handling motors)

- When connecting the unit to the power supply, dangerous voltages occur. Due to motor capacitor discharge time, do not open the motor within 5 minutes after disconnection of all phases.
- With a Control voltage fed in or a set speed value being saved, the motor will restart automatically after a power failure.
- 3. Dangerous external voltages can be present at the motor terminals even when the unit is turned off.
- 4. The Electronics housing can get hot.
- The cycling on and off of EC motors should be controlled by the DC control voltage (i.e. 0V DC will turn motor off). Excessive cycling of the motor by line voltage contactors may cause stress on the motors and reduce the motor life.

Speed adjustment Characteristics

The EC motor varies its speed linearly based on a 1-10V input signal. At 10 VDC, the motor runs at full speed. At 0 to approx. 1 VDC, the motor turns off. A chart of the speed control curve is shown below. The motor can be controlled at any speed below its nominal RPM.

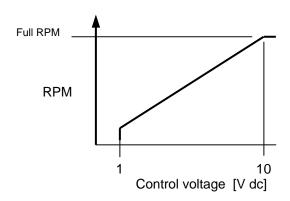

Control Signal

The input control signal can be supplied by an external control signal or from a factory installed proportional temperature control. Units with factory installed proportional temperature controls require no installation wiring and are adjusted with initial factory settings. These may require further adjustments to suit local field conditions.

External Control Signal (Supplied by others)

Contact control manufacturer for setup of external controller to provide a 0-10 VDC control signal. Wire the control signal to terminal board in unit control box. Refer to the fluid cooler EC wiring diagram for typical external signal control wiring.




EC MOTOR APPLICATION (cont'd)



A350P Proportional Temperature Control (Factory Installed) Units equipped with factory installed A350 controls use a proportional plus integral temperature controller to vary and maintain the motor speed at the desired fluid outlet temperatures. The controller has two main user adjustable features:

- Temperature Set point
- Throttling range

Leave the minimum Output setting at 0% and Jumpers should be set for Direct Acting (do not re-adjust)

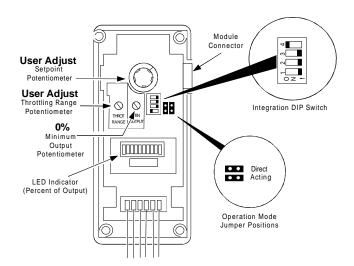

Fluid Temperature Set point

The fluid temperature set point potentiometer is adjustable from -30°F to 130°F.

Note: Very low set points may cause the fan motors to run full speed continually even if the fluid cooler is properly sized. The fans will turn off if the fluid temperature falls below the desired set point.

Minimum Output

The minimum output potentiometer controls the minimum signal sent to the motor and is factory set at 0%. It is adjustable between 0 and 60% of the output range. If this is adjusted to 50%, the motors will not start running until 5V is applied to the motor. The motor will start running at 50% of full speed. To maximize sound reduction and energy savings and to provide the most stable control, it is recommended this setting be left at 0%.

Throttling range


The throttling range potentiometer controls how far the system fluid temperature deviates from the control set point to generate a 100% output signal from the control and is adjustable from 2°F to 30°F range. The throttling range determines how quickly the motor will reach full speed when detecting a change in fluid temperature. For example, if the set point is 90°F and the throttling range is 10°F when the system temperature drops below 90°F, the fans will be off. When the system temperature reaches 100°F (90 + 10) the fans will be at maximum full speed. To make the fans ramp more slowly the throttling range should be increased. To maximize sound reduction and energy efficiency and to provide for the most stable control, it is recommended this setting be left at 10°F.

Reverse acting or direct acting mode of operation

The reverse acting/direct acting jumper is used to ensure the controller responds correctly to the desired fluid temperature. In Direct Acting (DA) mode, the motor speed increases as the temperature rises above desired set point. For proper fluid cooler operation, this jumper MUST be in Direct Acting (DA) mode. Failure to ensure J1 jumper is in direct acting mode will cause the system to trip on high fluid temperatures.

Integration constant

The integration constant switch provides ability to change controller from a proportional only control to a proportional plus integral control. To provide the most responsive system and to maintain a stable fluid temperature, it is recommended the integration setting be left on "fast" with the Mode switch set to OFF (Proportional AND Integral activated)

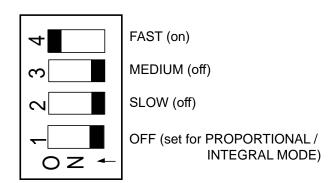



HEADER SIZES




GPM	(fps)	HEADER SIZE O.D. inches (mm)	CONNECTIONS AVAILABLE
0 - 10	(0.0 - 3.9)	1 1/8 (29)	PLAIN or MPT
11 - 20	(2.8 - 5.1)	1 3/8 (35)	PLAIN or MPT
21 - 30	(3.8 - 5.4)	1 5/8 (41)	PLAIN or MPT
31 - 50	(3.2 - 5.2)	2 1/8 (54)	PLAIN, MPT or FLANGED
51 - 80	(3.4 - 5.4)	2 5/8 (67)	PLAIN or MPT
81 - 150	(3.8 - 7.1)	3 1/8 (79)	PLAIN, MPT or FLANGED

OP ⁻	TIONAL FAC	TORY SUPP	LIED FLAN	GES
SIZE In. (mm)	FITTING	FLANGE DIA. In. (mm)	BOLT CIRCLE In. (mm)	HOLES - QTY @ In. (mm)
2 (50.8)	Flanged	6 (152.4)	4 3/4 (120.7)	4 @ 3/4 (19)
3 (76.2)	Flanged	7 1/2 (190.5)	6 (152.4)	4 @ 3/4 (19)


OPTIONAL FLANGED CONNECTIONS BOLT HOLE LOCATION

(150 lbs. working shock pressure)




DIMENSIONAL DATA




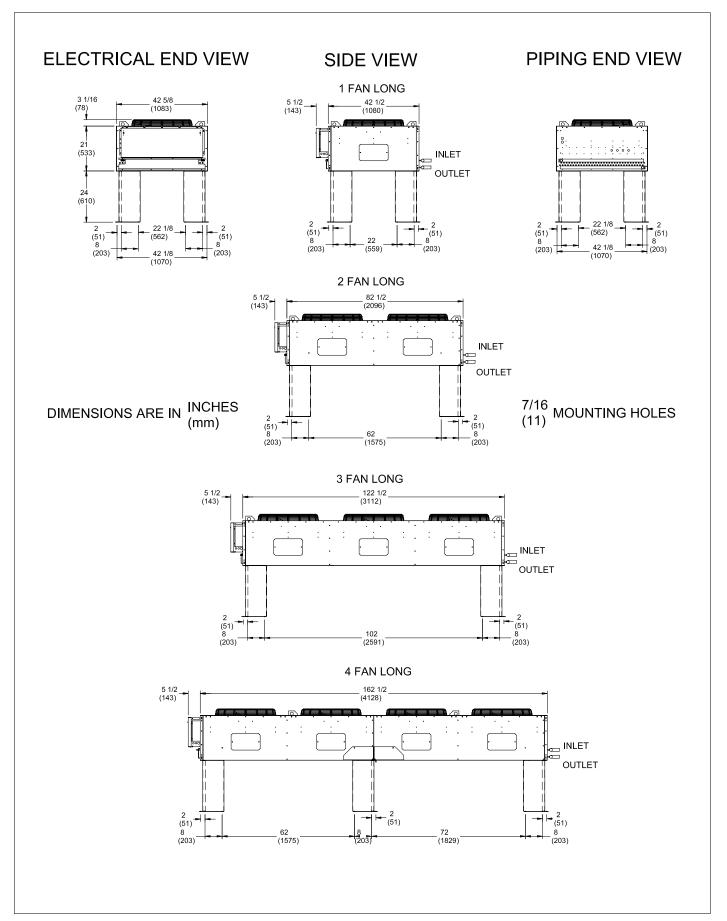

DIMENSIONAL DATA



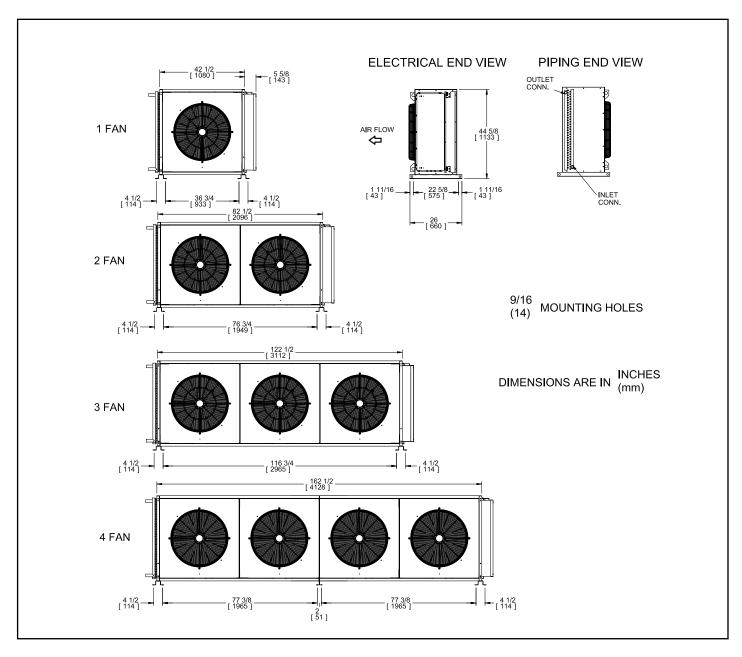

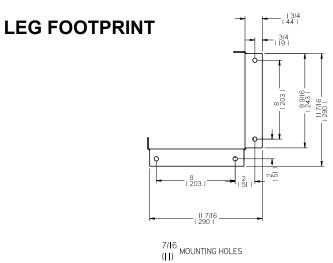

⚠ WARNING ⚠

ADEQUATE PRECAUTIONS MUST BE TAKEN, AFTER FIELD LEAK TESTING TO INSURE REMOVAL OF WATER IN TUBES. IT IS RECOMMENDED THAT AN INHIBITED GLYCOL SOLUTION BE USED TO FLUSH THE COMPLETE COIL. FAILURE TO TAKE PRECAUTIONS CAN RESULT IN FROZEN TUBES SHOULD THE UNIT BE SUBJECTED TO LOW AMBIENT CONDITIONS BEFORE PLACED IN OPERATION.

INSPECTION

A thorough inspection of the equipment, including all component parts and accessories, should be made immediately upon delivery. Any damage caused in transit, or missing parts, should be reported to the carrier at once. The consignee is responsible for making any claim for losses or damage. Electrical characteristics should also be checked at this time to ensure that they are correct.

LOCATION

Before handling and placing the unit into position a review of the most suitable location must be made. This fluid cooler is designed for outdoor installation. A number of factors must be taken into consideration when selecting a location. Most important is the


provision for a supply of ambient air to the fluid cooler, and removal of heated air from the fluid cooler area. Higher fluid temperatures, decreased performance, and the possibility of equipment failure may result from inadequate air supply.

Other considerations include:

- 1. Customer requests
- 2. Loading capacity of the roof or floor.
- 3. Distance to suitable electrical supply.
- 4. Accessibility for maintenance.
- 5. Local building codes.
- 6. Adjacent buildings relative to noise levels.


WALLS OR OBSTRUCTIONS

All sides of the unit must be a minimum of **4 feet** (1.25 m) away from any wall or obstruction. Overhead obstructions are not permitted. If enclosed by three walls, the fluid cooler must be installed as indicated for units in a pit.




MULTIPLE UNITS

A minimum of **8 feet** (2.5 m) is required between multiple units placed side by side. If placed end to end, the minimum distance between units is **4 feet** (1.25 m).



UNITS IN PITS

The top of the fluid cooler must be level with, or above the top of the pit. In addition, a minimum of **8 feet** (2.5 m) is required between the unit and the pit walls.

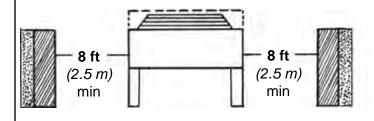

LOUVERS/FENCES


Louvers/fences must have a minimum of 80% free area and 4 feet $(1.25 \, m)$ minimum clearance between the unit and louvers/fence. Height of louver/fence must not exceed top of unit.



FIG. 1


LIFTING INSTRUCTIONS

Air cooled fluid coolers are large, heavy mechanical equipment and must be handled as such. A fully qualified and properly equipped crew with necessary rigging should be engaged to set the fluid cooler into position. Lifting holes have been provided at the corners or along sides for attaching lifting slings. Spreader bars must be used when lifting so that lifting forces are applied vertically. See Fig. 2. **Under no circumstances should the coil headers or return bends be used in lifting or moving the fluid cooler.**

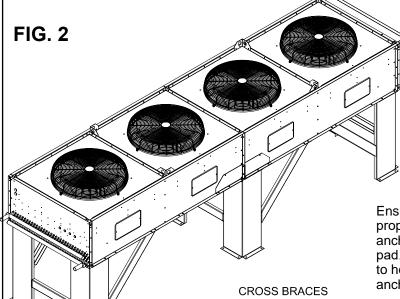

LOCATE CROSS BRACES BETWEEN EACH PAIR OF LEGS AS SHOWN FOR OPTIONAL 36" and 48" LEGS ON SINGLE FAN WIDE MODELS Ensure the unit is placed in a level position (to ensure proper drainage of fluid). The legs should be securely anchored to the building structure, sleeper or concrete pad. The weight of the fluid cooler alone is not enough to hold in place during a strong wind, the legs must be anchored.

LEG INSTALLATION INSTRUCTIONS

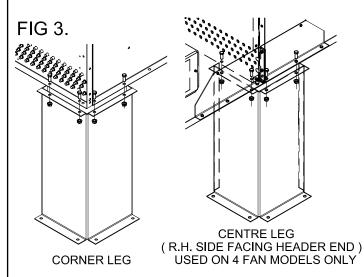

1) Assemble centre leg as shown.

Remove two bolts from bottom flange of unit side panels that match the hole pattern on the top flanges of both legs. Attach center legs using hardware provided at center divider panel location.

Replace bolts that were removed from side panels to secure leg assembly to bottom flanges of unit side panels.

2) Assemble four corner legs to bottom flanges on unit side panels and end panels using hardware provided, at matching mounting hole patterns. All legs are the same.



INSTALLATION (cont'd)

60Hz

ELECTRICAL WIRING

All wiring and connections to the air cooled fluid cooler must be made in accordance with the National Electrical Code and all local codes and regulations. Any wiring diagrams shown are basic and do not necessarily include electrical components which must be field supplied. (see pages 7,8,10 for typical wiring diagrams).

Refer to the Electrical Specifications table on pages 5, 9 for voltage availability and entering service requirements.

SYSTEM START-UP CHECKS

- Check the electrical characteristics of all components to be sure they agree with the power supply.
- 2. Check tightness of all fans and motor mounts.
- 3. Check tightness of all electrical connections.
- Upon start-up, check fans for correct rotation. Air is drawn through the condenser coil. To change rotation on 3 phase units reverse any two (2) fan motor leads.
- 5. All system piping must be thoroughly leak checked before a refrigerant charge is introduced.

MAINTENANCE

A semi annual inspection should be carried out by a qualified refrigeration service mechanic. The main power supply must be disconnected.

- Check electrical components. Tighten any loose connections.
- Check control capillary tubes and lines for signs of wear due to excessive vibration or rubbing on metal parts. Secure if necessary.
- Check tightness of all fans and motor mounts.
 Remove any deposits which could effect fan balance.
 Note: Fan motors are permanently lubricated and require only visual inspection.
- Clean the fluid cooler coil using a soft brush or by flushing with cool water or coil cleansers available through NRP (National Refrigeration Products Inc.)
- 5. Update service log information (back page of service manual)

HYDRONIC SYSTEM COMPONENTS

PIPING CONSIDERATIONS

- 1. All piping must comply with local city and plumbing codes.
- Correct choice of pipe material, diameter, velocity and friction loss (pressure drop) can result in glycol systems running at peak efficiency and performance and hence least cost.
- Studies have indicated that iron pipes are most susceptible to corrosion, followed by galvanized steel, lead, copper and copper alloys (i.e brass). PVC is generally no-corrosive.
- 4. Good glycol system design therefore requires that Galvanized Pipe NOT be used and a glycol manufacturer provide the appropriate Corrosion Inhibitor.
- 5. Parallel, Direct and Reverse Return piping (see illustration on page 19) networks are the most common used as they allow the same temperature fluid to be available to all loads and heat rejection devices (Fluid Coolers). Actual piping should be determined by a qualified hydronic system designer, based on site and design requirements.
- Isolation Valves should be provided for easy removal of hydronic system components, for repair, maintenance or replacement.
- 7. All piping should be leak tested after installation.
- 8. A pressure reducing valve should not be used in a glycol hydronic system.

PUMPING SYSTEM

Pumps

- 1. Mechanical seal type pumps must be used for glycol systems.
- Pumps are selected based on Total System Flow and Total Friction Loss (Highest Pressure Drop) through:
 - a. The Fluid Cooler
 - b. The Load (Chiller, CRAC Unit, etc)
 - c. Supply/Return Glycol Piping, Valves & Fittings The Sum of the above is the "Total Head" or Pressure Drop of the system, typically measured in ft-H₂O.
- This is a closed loop system. A counterhead acts on the pump suction so no allowance is required for vertical lift as in an open loop (i.e Open Cooling Tower) system.
- 4. Many hydronic system designers are specifying and many end-users are purchasing "Pump Packages". These Pump Packages come ready for final pipe and electrical connection, allowing the installer to focus on overall pipe connections.
- Pumps in Parallel are recommended for standby operation where pump failure may interfere with a critical application (i.e Data Center Cooling - N + 1 Design).



HYDRONIC SYSTEM COMPONENTS (cont'd)



PUMPING SYSTEM (cont'd)

Expansion Tanks

As ambient temperature changes so does fluid density. System pressure is maintained within an acceptable range with an Expansion Tank. The expansion tank allows for the expansion and contraction of the glycol due to the temperature change in the closed loop system. Expansion tanks are typically sized based on a percentage of the total system volume.

Air Separators

Air Separators are designed to remove entrained air allowing the pumps, valves and heat transfer mediums to operate and transfer energy more efficiently.

Other Common Hydronic System Options

Depending on the complexity of the hydronic system other system components and devices may be specified such as


- Flow, Pressure Gauges and /or Switches
- · Isolation and other Valves
- Strainers

Selecting Glycol

Inhibited Propylene or Ethylene Glycol Solutions ranging from 30 to 50 % are the most commonly used. 30 % is the minimum amount for inhibitors to be effective. For freeze protection amounts, see the following guide. (Consult Glycol supplier for most accurate data)


%	Freeze P	oint °F (°C)
By Volume	Ethylene Glycol	Propylene Glycol
30	5 (-15)	9 (-17.7)
40	-10 <i>(-</i> 23.3)	5 (-15)
50	-32 <i>(-35.5)</i>	-29 <i>(-33.8)</i>


Typical Hydronic System Heat Rejection Closed Loop c/w Fluid Coolers

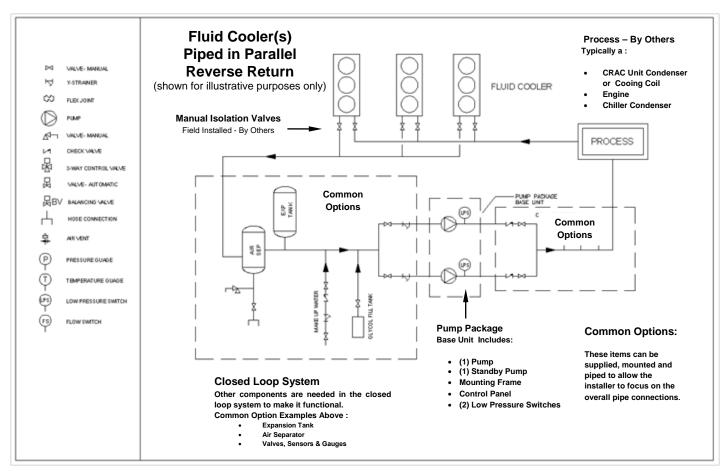

TFM

PUMP PACKAGE SELECTION PARAMETERS

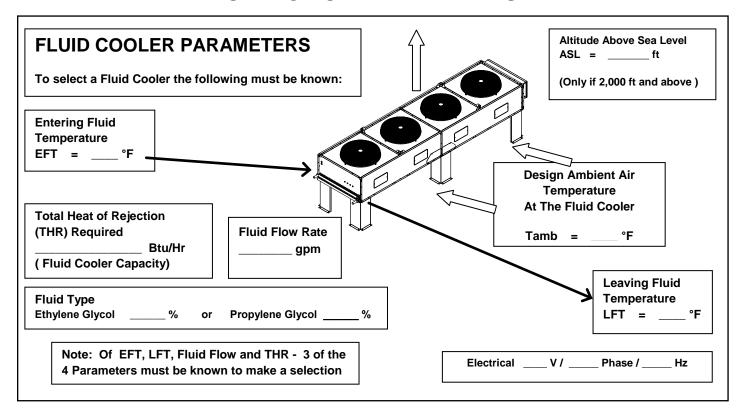

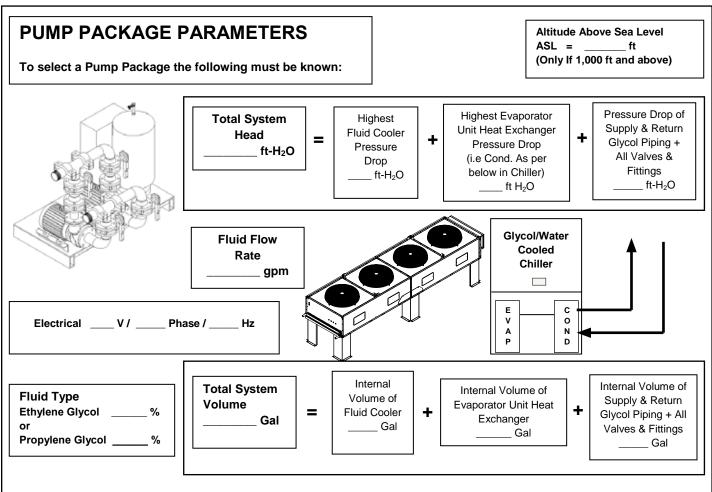

Fluid Type:	□ Water □ Ethy □ Prop	lene Glycol / Water ylene Glycol / Water	
Elevation:	Feet Above Sea Level		
Fluid Concentration:	%Water	%Glycol	
Air Inlet (ambient temp.)	°F		
Three of the four following	parameters must be spe	cified:	
		2. Fluid Inlet Temperature	
3. Fluid Flow Rate	GPM	4. Fluid Outlet Temperature	°F
1. Voltage (S2 = 208-230/ T3 = 208-230/	3/60 T4 = 460/3/60 T5 =	575/3/60) Specify S2,S4, S5,T	3,T4 or T
2. Please Specify (Check ☐ Control Voltage 24 ☐ Control Voltage 12 ☐ Control Voltage 24 ☐ Fan Cycling Ambi ☐ Fan Cycling Aqua	3/60 T4 = 460/3/60 T5 = 6 Box) Options Required 40V (Standard) 20V 4V sent Thermostat astat Thermostat rol by Others	Specify S2,S4, S5,T I: □ Variable Speed EC Motor □ Extended leg kits 36" □ Extended leg kits 48" □ Gold Coat Fin □ Copper Fin	3,T4 or T
1. Voltage (S2 = 208-230/ T3 = 208-230/ 2. Please Specify (Check Control Voltage 24 Control Voltage 12 Control Voltage 24 Fan Cycling Ambi Fan Cycling Aqua Fan Cycling Cont Non-fused disconr	3/60 T4 = 460/3/60 T5 = 6 Box) Options Required 40V (Standard) 20V 4V sent Thermostat astat Thermostat rol by Others	Specify S2,S4, S5,T I: □ Variable Speed EC Motor □ Extended leg kits 36" □ Extended leg kits 48" □ Gold Coat Fin □ Copper Fin	3,T4 or T
1. Voltage (S2 = 208-230/ T3 = 208-230/ 2. Please Specify (Check ☐ Control Voltage 24 ☐ Control Voltage 12 ☐ Control Voltage 24 ☐ Fan Cycling Ambi ☐ Fan Cycling Aqua ☐ Fan Cycling Control Non-fused disconr	3/60 T4 = 460/3/60 T5 = c Box) Options Required 40V (Standard) 20V 4V ent Thermostat astat Thermostat rol by Others nect harge configuration Telephone	Specify S2,S4, S5,T I: □ Variable Speed EC Motor □ Extended leg kits 36" □ Extended leg kits 48" □ Gold Coat Fin □ Copper Fin	3,T4 or T



PROJECT INFORMATION

60Hz

System	
Model Number	Date of Start-Up
Serial Number	Service Contractor
Refrigerant	Phone
Electrical Supply	Email



PRODUCT SUPPORT RESOURCES





web: t-rp.com/tfm email: acc-fc@t-rp.com call: 1-844-893-3222 x526



email: troubleshooting@t-rp.com call: 1-844-893-3222 x529



web: t-rp.com/parts email: parts@t-rp.com call: 1-844-893-3222 x501



web: t-rp.com/warranty email: warranty@t-rp.com call: 1-844-893-3222 x501




email: orders@t-rp.com call: 1-844-893-3222 x501



email: shipping@t-rp.com call: 1-844-893-3222 x503

"AS BUILT" SERVICE PARTS LIST

Service Parts List Label To Be Attached HERE

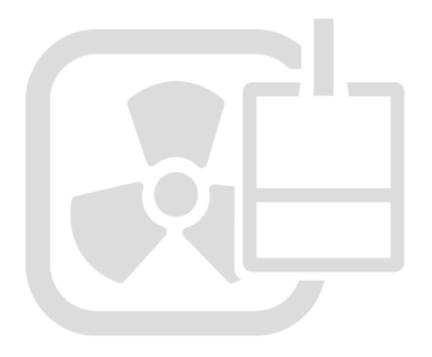



NATIONAL REFRIGERATION & AIR CONDITIONING CANADA CORP.

159 Roy Blvd.

Brantford Ontario Canada N3R 7K1 PHONE: (519) 751-0444 800-463-9517 FAX (519) 753-1140 www.t-rp.com



